





Workshop Manual

chassis

SUPPLEMENT

MITSUBISHI L400 '98

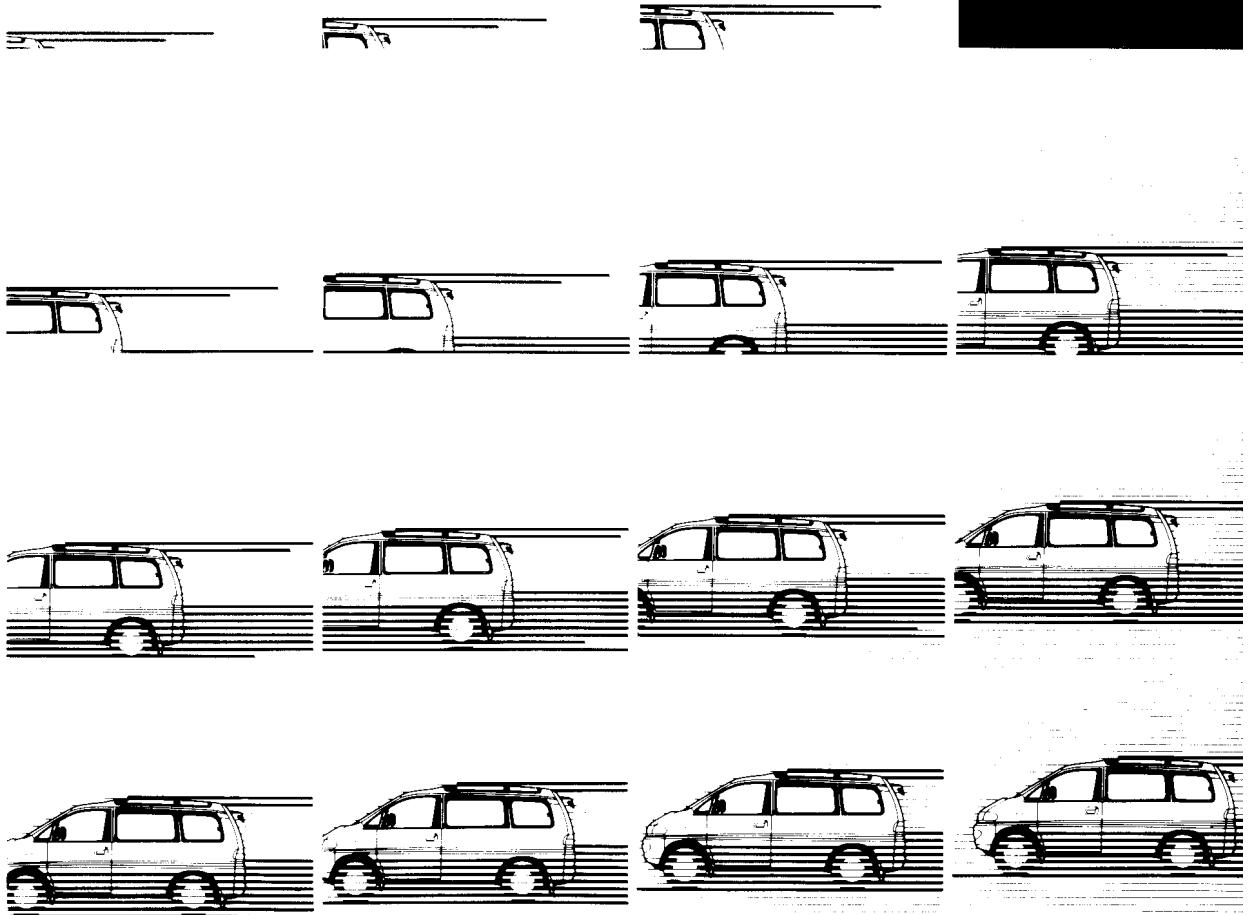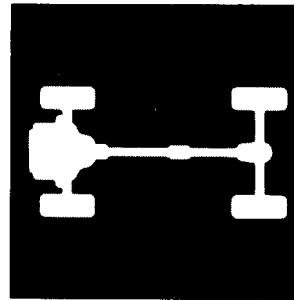

MITSUBISHI L400

WORKSHOP MANUAL SUPPLEMENT

FOREWORD

This manual outlines changes in servicing procedures related to the chassis including vehicle inspections, adjustments and improvements in the newly equipped models.

Use the following manuals in combination with this manual as required.

TECHNICAL INFORMATION MANUAL

PYWE9410

WORKSHOP MANUAL

CHASSIS GROUP

PWWE9410

PWWE9410-A

PWWE9410-B

ENGINE GROUP

PWEE□□□□

(Looseleaf edition)

ELECTRICAL WIRING

PHWE9407

PHWE9407-A

PHWE9407-B

BODY REPAIR MANUAL

PBWE9404

PARTS CATALOGUE

B603A808A□

| | |
|---|-----|
| General | 00 |
| Fuel | 13 |
| Steering | 37A |
| Body | 42 |
| Exterior | 51 |
| Interior and Supplemental Restraint System (SRS) | 52 |
| Chassis Electrical | 54 |

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

