

37A STEERING

GENERAL

OUTLINE OF CHANGES

- The following maintenance service points have been changed to correspond to the change of steering wheel.

STEERING WHEEL

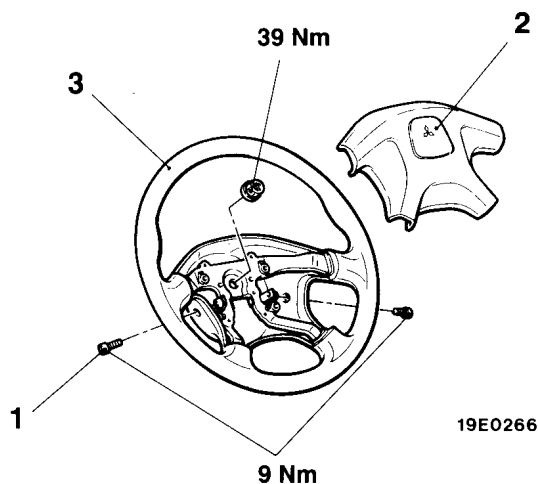
REMOVAL AND INSTALLATION

CAUTION: SRS

Before removal of air bag module, refer to GROUP 52B – SRS Service Precautions and Air Bag Module and Clock Spring.

Post-installation Operation

- Checking Steering Wheel Position with Wheels Straight Ahead


Removal steps

1. Screw <Vehicles with SRS>
2. Horn pad <Vehicles without SRS> or air bag module <Vehicles with SRS> (Refer to GROUP 52B)
3. Steering wheel


REMOVAL SERVICE POINT
◀A▶ STEERING WHEEL REMOVAL
