51 EXTERIOR

GENERAL

OUTLINE OF CHANGES


- The following maintenance service points have been changed to correspond to the change of front bumper.
- The following maintenance service points have been changed to correspond to the change of radiator grille.

FRONT BUMPER

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation

- Front Combination Lamp Removal and Installation (Refer to GROUP 54.)
- Headlamp Removal and Installation (Refer to GROUP 54.)
- Radiator Grille Removal and Installation (Refer to P.51-2.)
- Front Turn-signal Lamp Removal and Installation (Refer to GROUP 54.)
- Under Cover Side Panel Removal and Installation

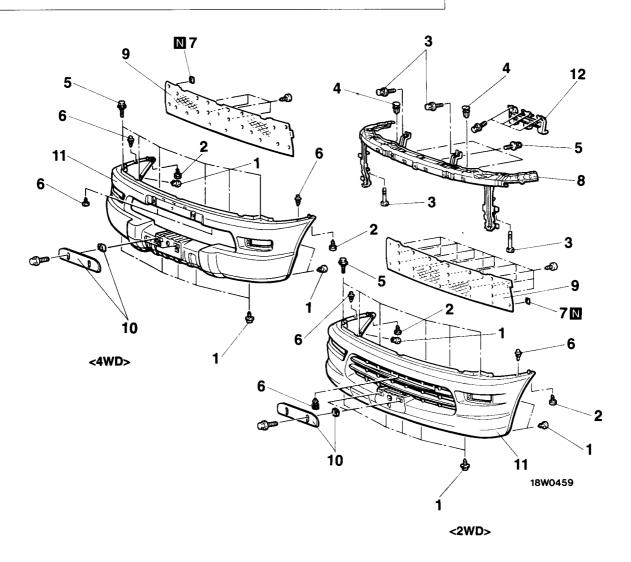


Removal steps

- 1. Clip
- 2. Screw
- 3. Bolt
- Front bumper assembly
- 4. Clip
- 5. Bolt

- Clip
- 7. Push-on type spring nut
- 8. Front bumper reinforcement
- 9. Net
- 10. Licence plate bracket
- 11. Front bumper face
- 12. Front bumper bracket assembly

RADIATOR GRILLE REMOVAL AND INSTALLATION

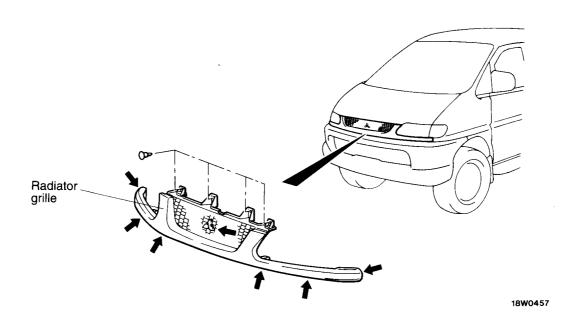

Remark

mark indicates plastic clip position